


Owner's Manual / Manual del Propietario

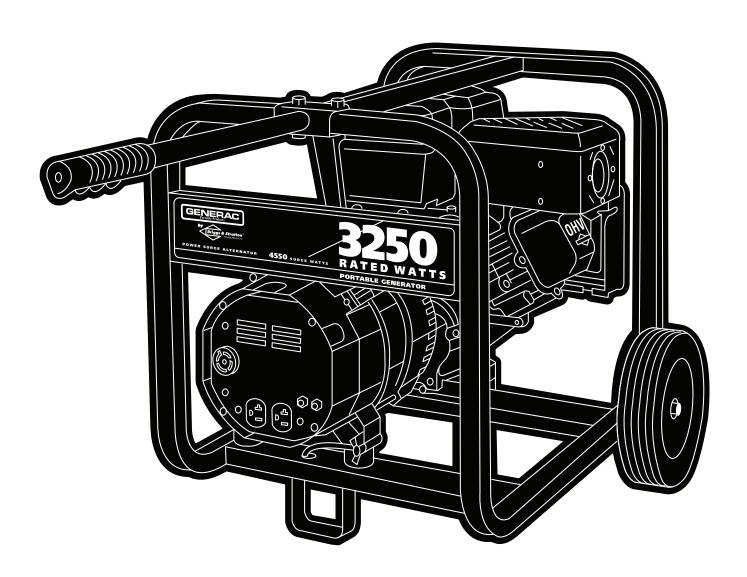

Questions? Help is just a moment away!

Preguntas? La ayuda es justa un momento lejos!

Call: Generac Generator Helpline - I-800-270-1408 M-F 8-5 CT

Llamada: Generador Helpline De Generac - I-800-270-1408 M-F 8-5 CT

Web: www.generac-portables.com or www.briggsandstratton.com





EQUIPMENT DESCRIPTION



Read this manual carefully and become familiar with your pressure washer. Know its applications, its limitations and any hazards involved.

This generator is an engine—driven, revolving field, alternating current (AC) generator. It was designed to supply electrical power for operating compatible electrical lighting, appliances, tools and motor loads. The generator's revolving field is driven at about 3,600 rpm by a single-cylinder engine.

CAUTION! DO NOT exceed the generator's wattage/amperage capacity. See "Don't Overload the Generator" on page 8.

Every effort has been made to ensure that information in this manual is accurate and current. However, Generac reserves the right to change, alter or otherwise improve the product and this document at any time without prior notice. The Emission Control System for this generator is warranted for standards set by the Environmental Protection Agency. For warranty information refer to the engine owner's manual.

SAFETY RULES

The safety alert symbol () is used with a signal word (DANGER, CAUTION, WARNING), a pictorial and/or a safety message to alert you to hazards. DANGER indicates a hazard which, if not avoided, will result in death or serious injury. WARNING indicates a hazard which, if not avoided, could result in death or serious injury. CAUTION indicates a hazard which, if not avoided, might result in minor or moderate injury. CAUTION, when used without the alert symbol, indicates a situation that could result in equipment damage. Follow safety messages to avoid or reduce the risk of injury or death.

A

WARNING

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

In the State of California a spark arrester is required by law (Section 4442 of the California Public Resources Code). Other states may have similar laws. Federal laws apply on federal lands. If you equip the muffler with a spark arrester, it must be maintained in effective working order.

A DANGER



Running generator gives off carbon monoxide, an odorless, colorless, poison gas.

Breathing carbon monoxide will cause nausea, fainting or death.

- · Operate generator ONLY outdoors.
- Keep at least 2 feet of clearance on all sides of generator for adequate ventilation.
- Do not operate generator inside any building or enclosure, including the generator compartment of a recreational vehicle (RV).

A DANGER



Failure to properly ground generator can result in electrocution, especially if the generator is equipped with a wheel kit.

 National Electric Code requires generator to be properly grounded to an approved earth ground. Call an electrician for local grounding requirements.

A

DANGER



Generator produces powerful voltage.

Failure to isolate generator from power utility can result in death or injury to electric utility workers due to backfeed of electrical energy.

- When using generator for backup power, notify utility company. Use approved transfer equipment to isolate generator from electric utility.
- Use a ground circuit fault interrupter (GFCI) in any damp or highly conductive area, such as metal decking or steel work.
- Do not touch bare wires or receptacles.
- Do not use generator with electrical cords which are worn, frayed, bare or otherwise damaged.
- · Do not operate generator in the rain.
- Do not handle generator or electrical cords while standing in water, while barefoot, or while hands or feet are wet.
- Do not allow unqualified persons or children to operate or service generator.

WARNING



Unintentional sparking can result in fire or electric shock.

WHEN ADJUSTING OR MAKING REPAIRS TO YOUR GENERATOR

 Disconnect the spark plug wire from the spark plug and place the wire where it cannot contact spark plug.

Generac Portable Products 3250 Watt Generator







▲ WARNING



Gasoline and its vapors are extremely flammable and explosive.



Fire or explosion can cause severe burns or death.

WHEN ADDING FUEL

- Turn generator OFF and let it cool at least 2 minutes before removing gas cap. Loosen cap slowly to relieve pressure in tank.
- · Fill fuel tank outdoors.
- Do not overfill tank. Allow space for fuel expansion.
- Keep gasoline away from sparks, open flames, pilot lights, heat, and other ignition sources.
- Do not light a cigarette or smoke.

WHEN OPERATING EQUIPMENT

 Do not tip engine or equipment at angle which causes gasoline to spill.

WHEN TRANSPORTING OR REPAIRING EOUIPMENT

- Transport/repair with fuel tank EMPTY or with fuel shutoff valve OFF.
- · Disconnect spark plug wire.

WHEN STORING GASOLINE OR EQUIPMENT WITH FUEL IN TANK

 Store away from furnaces, stoves, water heaters, clothes dryers or other appliances that have pilot light or other ignition source because they can ignite gasoline vapors.

DANGER

Storage batteries give off explosive hydrogen gas during recharging.



Hydrogen gas stays around battery for a long time after battery has been charged.

Slightest spark will ignite hydrogen and cause explosion.

You can be blinded or severely injured.



Battery electrolyte fluid contains acid and is extremely caustic.

Contact with battery fluid will cause severe chemical burns.

- Do not allow any open flame, spark, heat, or lit cigarette during and for several minutes after charging a battery.
- · Wear protective goggles, rubber apron, and rubber gloves.

WARNING



Running engines produce heat. Temperature of muffler and nearby areas can reach or exceed 150°F (65°C).

Severe burns can occur on contact.

- Do not touch hot surfaces.
- · Allow equipment to cool before touching.

A CAUTION

Excessively high operating speeds increase risk of injury and damage to generator.

Excessively low speeds impose a heavy load.

- Do not tamper with governed speed. Generator supplies correct rated frequency and voltage when running at governed speed.
- · Do not modify generator in any way.

CAUTION

Exceeding generators wattage/amperage capacity can damage generator and/or electrical devices connected to it

- See "Don't Overload Your Generator" on page 8.
- Start generator and let engine stabilize before connecting electrical loads.
- Connect electrical loads in OFF position, then turn ON for operation.
- Turn electrical loads OFF and disconnect from generator before stopping generator.

CAUTION

Improper treatment of generator can damage it and shorten its life.

- · Use generator only for intended uses.
- If you have questions about intended use, ask dealer or contact Generac.
- · Operate generator only on level surfaces.
- Do not expose generator to excessive moisture, dust, dirt, or corrosive vapors.
- Do not insert any objects through cooling slots.
- If connected devices overheat, turn them off and disconnect them from generator.
- Shut off generator if:
 - -electrical output is lost;
 - -equipment sparks, smokes, or emits flames;
 - -unit vibrates excessively.






KNOW YOUR GENERATOR

Read this owner's manual and safety rules before operating your generator.

Compare the illustrations with your generator, to familiarize yourself with the locations of various controls and adjustments. Save this manual for future reference.

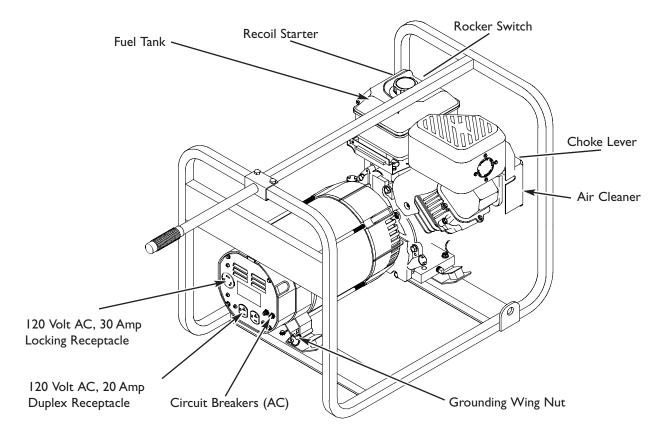

I 20 Volt AC, 20 Amp Duplex Receptacle — May be used to supply electrical power for the operation of I 20 Volt AC, 20 Amp, single phase, 60 Hz electrical lighting, appliance, tool and motor loads.

I 20 Volt AC, 30 Amp Locking Receptacle — May be used to supply electrical power for the operation of I 20 Volt AC, 30 Amp, single phase, 60 Hz electrical lighting, appliance, tool and motor loads.

Air Cleaner — Uses a dry type filter element and foam pre-cleaner to limit the amount of dirt and dust sucked into the engine.


Choke Lever — Used when starting a cold engine. **Circuit Breakers (AC)** — Each receptacle is provided with a push-to-reset circuit breaker to protect the generator against electrical overload.

Fuel Tank — Capacity of one U.S. gallon.

Grounding Wing Nut — Provides a tie-point for connecting the generator frame to earth ground.

Recoil starter — Used to start the engine.

Rocker Switch — Set this switch to "**On**" before using recoil starter. Set switch to "**Off**" to switch OFF engine.

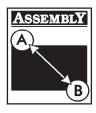






INSTALL WHEEL KIT

To install wheel kit you need the following tools:

- 15/16" (22mm) box, open end, or socket wrench
- Two I3mm box, open end, or socket wrenches

Install Wheel Kit as follows: (Refer to Figure 1)

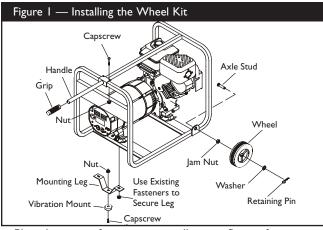

- · Place bottom of generator cradle on a flat surface.
- Place axle stud through wheel retainer on cradle frame.
- Use 15/16" wrench to secure the axle stud to frame with 5/8-18 jam nut.
- Install the other axle stud in the same manner.

NOTE: Be sure to install wheel with raised hub inboard.

- Tip unit and install the wheel. Place flat washer over axle stud.
- Retain wheel on axle stud with retaining pin. Install other wheel on remaining axle shaft the same way.
- Attach the vibration mount to the mounting leg with a capscrew and lock nut.
- Remove two front nuts from vibration mount on unit with 13mm wrench. Use these nuts to retain the mounting leg.
- Center the lifting handle on generator end of cradle.
 Attach the handle using two 13mm wrenches with two capscrews and two hex nuts.

BEFORE STARTING THE ENGINE

Add Engine Oil

CAUTION! Any attempt to crank or start the engine before it has been properly serviced with the recommended oil results in an engine failure.

- · Make sure unit is on a level surface.
- Follow the oil recommendations and oil fill instructions given in the engine owner's manual.

NOTE: The generator's revolving field rides on a pre-lubricated and sealed ball bearing that requires no additional lubrication for the life of the bearing.

Add Gasoline

fuel tank.




WARNING! NEVER fill fuel tank indoors. NEVER fill fuel tank when engine is running or hot. Allow unit to cool for two minutes before refueling. DO NOT light a cigarette or smoke when filling the



WARNING! DO NOT overfill the fuel tank. Always allow room for fuel expansion.

- Use regular UNLEADED gasoline with the generator engine. DO NOT use premium gasoline. DO NOT mix oil with gasoline.
- Clean area around fuel fill cap; remove cap.
- Slowly add unleaded regular gasoline to fuel tank. Be careful not to overfill. Allow about 1.5" of tank space for fuel expansion (Figure 2).

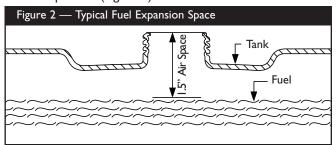

· Install fuel cap and wipe up any spilled gasoline.

IMPORTANT: It is important to prevent gum deposits from forming in essential fuel system parts such as the carburetor, fuel filter, fuel hose or tank during storage. Also, experience indicates that alcohol–blended fuels (called gasohol, ethanol or methanol) can attract moisture, which leads to separation and formation of acids during storage. Acidic gas can damage the fuel system of an engine while in storage.


To avoid engine problems, the fuel system should be emptied before storage of 30 days or longer. See "Storage" on page 9. NEVER use engine or carburetor cleaner products in the fuel tank or permanent damage may occur.





GROUNDING THE GENERATOR

The National Electric Code requires the frame and external electrically conductive parts of the generator be properly connected to approved earth ground. Local electrical codes may also require proper grounding of the unit. For this purpose, a grounding wing nut (Figure 1) is provided on the cradle.

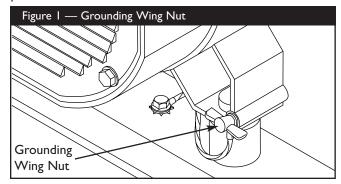

Generally, connecting a No. 12 AWG (American Wire Gauge) stranded copper wire to the grounding wing nut and to an earth–driven copper or brass grounding rod (electrode) provides adequate protection against electrical shock. However, local codes may vary widely. Consult with a local electrician for grounding requirements in your area. Be sure to keep the ground wire attached while you connect the electrode.

Properly grounding the generator helps prevent electrical shock if a ground fault condition exists in the generator or in connected electrical devices, especially when the unit is equipped with a wheel kit. Proper grounding also helps dissipate static electricity, which often builds up in ungrounded devices.

OPERATING THE GENERATOR




CAUTION! NEVER start or stop unit with electrical loads connected AND with the connected devices turned ON.


Starting the Engine

Disconnect all electrical loads from the generator. Use the following start instruction steps by numerical order:


1. Turn the fuel valve to the "On" position (Figure 3).

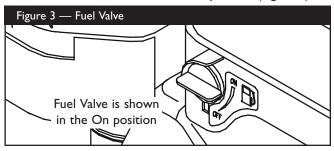

2. Place the choke lever in the "**Choke**" position (Figure 4).

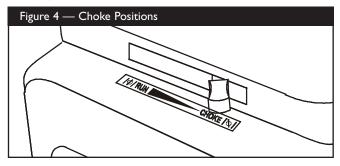

3. Set the rocker switch to "On" position (Figure 5).

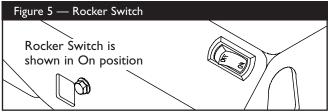

- 4. Grasp the recoil handle and pull slowly until slight resistance is felt. Then pull rapidly to start engine.
- Move choke lever to "Run" position a short distance at a time over several seconds in warm weather or minutes in cold weather. Let engine run smoothly before each change. Operate with choke in "Run" position.

Refer to the engine owner's manual for complete starting instructions.

Connecting Electrical Loads

- Let engine stabilize and warm up for a few minutes after starting.
- Plug in and turn on the desired 120 Volt AC, single phase, 60 Hz electrical loads.

Generac Portable Products 3250 Watt Generator







- DO NOT connect 240 Volt loads to the 120 Volt duplex receptacles.
- DO NOT connect 3-phase loads to the generator.
- DO NOT connect 50 Hz loads to the generator.
- **DO NOT OVERLOAD THE GENERATOR.** See "Don't Overload the Generator" on page 8.

Stopping the Engine


- Unplug all electrical loads from generator panel receptacles. NEVER start or stop engine with electrical devices plugged in and turned ON.
- Let engine run at no-load for several minutes to stabilize the internal temperatures of engine and generator.
- Move rocker switch to "Off" position.
- Move the fuel valve to the "Off" position.

RECEPTACLES

This generator is equipped with the following receptacles:

120 Volt AC, 20 Amp Duplex Receptacle


This receptacle (Figure 6) is protected against overload by a push-to-reset circuit breaker.

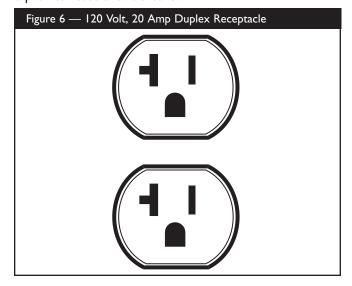

Use each receptacle to operate 120 Volt AC, single-phase, 60 Hz electrical loads requiring up to 2,400 watts (2.4 kW) at 20 Amps of current. Use cord sets that are rated for 125 Volts at 20 Amps (or greater).

120 Volt AC, 30 Amp Locking Receptacle

Use a NEMA L5-30 plug with this receptacle. Connect a 3-wire cord set rated for 125 Volts AC at 30 Amps to the plug (Figure 7).

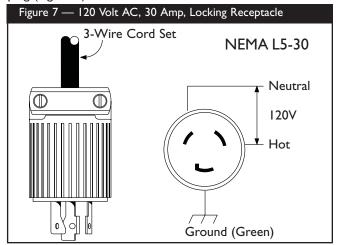

Use this receptacle to operate 120 Volt AC, 60 Hz, single phase loads requiring up to 3,600 watts (3.6 kW) of power at 30 Amps. The outlet is protected by a push-to-reset circuit breaker.



CAUTION! Although this outlet is rated for 120 Volt 30 Amp (up to 3,600 watts), the generator is only rated for 3,250 watts at 27 Amps. Powering loads that exceed the wattage/amperage capacity of the generator can damage it or cause serious injuries.





DON'T OVERLOAD YOUR GENERATOR

Capacity

You must make sure your generator can supply enough rated (running) and surge (starting) watts for the items you will power at the same time. Follow these simple steps:

- 1. Select the items you will power at the same time.
- 2. Total the rated (running) watts of these items. This is the amount of power your generator must produce to keep your items running. See Figure 8.
- 3. Estimate how many surge (starting) watts you will need. Surge wattage is the short burst of power needed to start electric motor-driven tools or appliances such as a circular saw or refrigerator. Because not all motors start at the same time, total surge watts can be estimated by adding only the item(s) with the highest additional surge watts to the total rated watts from step 2.

Example:

Tool or Appliance	Rated (Running) Watts	Additional Surge (Starting) Watts
Window Air	1200	1800
Conditioner		
Refrigerator	800	1600
Deep Freezer	500	500
Television	500	-
Light (75 Watts)	75	-
	3075 Total	1800 Highest
	Running Watts	Surge Watts

Total Rated (Running) Watts = 3075 Highest Additional Surge Watts = 1800 Total Generator Output Required = 4875

Power Management

To prolong the life of your generator and attached devices, it is important to take care when adding electrical loads to your generator. There should be nothing connected to the generator outlets before starting it's engine. The correct and safe way to manage generator power is to sequentially add loads as follows:

- With nothing connected to the generator, start the engine as described in this manual.
- Plug in and turn on the first load, preferably the largest load you have.
- 3. Permit the generator output to stabilize (engine runs smoothly and attached device operates properly.

- 4. Plug in and turn on the next load.
- 5. Again, permit the generator to stabilize.
- 6. Repeat steps 4 and 5 for each additional load.

NEVER add more loads than the generator capacity. Take special care to consider surge loads in generator capacity, as described above.

Tool or Appliance Rated* (Running) Watts Surge (Starting) Watts	Figure 8 - Wattage Reference Chart	:	
Tool or Appliance (Running) Watts Surge (Starting) Watts		Rated*	
Starting Watts Watts Watts	Tool or Appliance		
Light Bulb - 75 watt 75	, , , , , , , , , , , , , , , , , , ,	\	
Light Bulb - 75 watt 75			Watts
Deep Freezer		7-	
Sump Pump 800 1200 Refrigerator/Freezer - 18 Cu. Ft. 800 1600 Water Well Pump - 1/3 HP 1000 2000 Heating/Cooling Window AC - 10,000 BTU 1200 1800 Window Fan 300 600 Furnace Fan Blower - 1/2 HP 800 1300 Kitchen 1500 - Microwave Oven - 1000 Watt 1000 - - Coffee Maker 1500 - - Electric Stove - Single Element 1500 - - Hot Plate 2500 - - Family Room 100 - VCR 100 - - Stereo Receiver 450 - - Color Television - 27" 500 - - Personal Computer w/17" monitor 800 - - Security System 180 - - AM/FM Clock Radio 300 <td< td=""><td></td><td></td><td></td></td<>			
Refrigerator/Freezer - 18 Cu. Ft. 800 1600 Water Well Pump - 1/3 HP 1000 2000 Heating/Cooling			
Water Well Pump - 1/3 HP 1000 2000 Heating/Cooling			
Heating/Cooling Window AC - 10,000 BTU 1200 1800 Window Fan 300 600 Furnace Fan Blower - 1/2 HP 800 1300 Kitchen Microwave Oven - 1000 Watt 1000 - Coffee Maker 1500 - Electric Stove - Single Element 1500 - Hot Plate 2500 - Family Room DVD/CD Player 100 - VCR 100 - Stereo Receiver 450 - Color Television - 27" 500 - Personal Computer w/17" monitor 800 - COther Security System 180 - AM/FM Clock Radio 300 - Garage Door Opener - 1/2 HP 480 520 Electric Water Heater - 40 Gallon 4000 - DIY/Job Site Quartz Halogen Work Light 1000 - Airless Sprayer - 1/3 HP 600 1200 Reciprocating Saw 960 960 Electric Drill - 1/2 HP 1000 1000 Circular Saw - 7 1/4" 1500 1500 Miter Saw - 10" 1800 1800 Table Planer - 6" 1800 1800 Table Planer - 6" 1800 1800 Table Saw/Radial Arm Saw - 10" 2000 2000 2000 Table Saw/Radial Arm Saw - 10" 2000			
Window AC - 10,000 BTU 1200 1800 Window Fan 300 600 Furnace Fan Blower - 1/2 HP 800 1300 Kitchen I000 - Microwave Oven - 1000 Watt 1000 - Coffee Maker 1500 - Electric Stove - Single Element 1500 - Hot Plate 2500 - Family Room 100 - DVD/CD Player 100 - VCR 100 - Stereo Receiver 450 - Color Television - 27" 500 - Personal Computer w/17" monitor 800 - Other Security System 180 - AM/FM Clock Radio 300 - - Garage Door Opener - 1/2 HP 480 520 Electric Water Heater - 40 Gallon 4000 - DIY/Job Site		1000	2000
Window Fan 300 600 Furnace Fan Blower - 1/2 HP 800 1300 Kitchen Nicrowave Oven - 1000 Watt 1000 - Microwave Oven - 1000 Watt 1500 - Coffee Maker 1500 - Electric Stove - Single Element 1500 - Hot Plate 2500 - Family Room DVD/CD Player 100 - VCR 100 - - Stereo Receiver 450 - - Color Television - 27" 500 - - Personal Computer w/17" monitor 800 - - Other Security System 180 - - AM/FM Clock Radio 300 - - - AM/FM Clock Radio 300 - - - Blectric Water Heater - 40 Gallon 4000 - - DIY/Job Site - - - Quartz Halogen Work Light 1000 - - Airless Sprayer - 1/3 HP 600 1200 -	Heating/Cooling		
Name	·		
Kitchen Microwave Oven - 1000 Watt 1000 - Coffee Maker 1500 - Electric Stove - Single Element 1500 - Hot Plate 2500 - Family Room - - DVD/CD Player 100 - VCR 100 - Stereo Receiver 450 - Color Television - 27" 500 - Personal Computer w/17" monitor 800 - Other Security System 180 - AM/FM Clock Radio 300 - Garage Door Opener - 1/2 HP 480 520 Electric Water Heater - 40 Gallon 4000 - DIY/Job Site - - Quartz Halogen Work Light 1000 - Airless Sprayer - 1/3 HP 600 1200 Reciprocating Saw 960 960 Electric Drill - 1/2 HP 1000 1000 Circular Saw - 7 1/4" 1500 1500 Miter Saw - 10" <t< td=""><td></td><td>300</td><td></td></t<>		300	
Microwave Oven - 1000 Watt 1000 - Coffee Maker 1500 - Electric Stove - Single Element 1500 - Hot Plate 2500 - Family Room - - DVD/CD Player 100 - VCR 100 - Stereo Receiver 450 - Color Television - 27" 500 - Personal Computer w/17" monitor 800 - Other - - Security System 180 - AM/FM Clock Radio 300 - Garage Door Opener - 1/2 HP 480 520 Electric Water Heater - 40 Gallon 4000 - DIY/Job Site - - Quartz Halogen Work Light 1000 - Airless Sprayer - 1/3 HP 600 1200 Reciprocating Saw 960 960 Electric Drill - 1/2 HP 1000 1000 Circular Saw - 7 1/4" 1500 1500 <td< td=""><td></td><td>800</td><td>1300</td></td<>		800	1300
Coffee Maker			
Electric Stove - Single Element	Microwave Oven - 1000 Watt		-
Hot Plate			-
DVD/CD Player	Electric Stove - Single Element	1500	-
DVD/CD Player 100 - VCR 100 - Stereo Receiver 450 - Color Television - 27" 500 - Personal Computer w/17" monitor 800 - Other - - Security System 180 - AM/FM Clock Radio 300 - Garage Door Opener - 1/2 HP 480 520 Electric Water Heater - 40 Gallon 4000 - DIY/Job Site - - Quartz Halogen Work Light 1000 - Airless Sprayer - 1/3 HP 600 1200 Reciprocating Saw 960 960 Electric Drill - 1/2 HP 1000 1000 Circular Saw - 7 1/4" 1500 1500 Miter Saw - 10" 1800 1800 Table Planer - 6" 1800 1800 Table Saw/Radial Arm Saw - 10" 2000 2000		2500	-
VCR 100 - Stereo Receiver 450 - Color Television - 27" 500 - Personal Computer w/17" monitor 800 - Other - - Security System 180 - AM/FM Clock Radio 300 - Garage Door Opener - 1/2 HP 480 520 Electric Water Heater - 40 Gallon 4000 - DIY/Job Site - - Quartz Halogen Work Light 1000 - Airless Sprayer - 1/3 HP 600 1200 Reciprocating Saw 960 960 Electric Drill - 1/2 HP 1000 1000 Circular Saw - 7 1/4" 1500 1500 Miter Saw - 10" 1800 1800 Table Planer - 6" 1800 1800 Table Saw/Radial Arm Saw - 10" 2000 2000			
Stereo Receiver			-
Color Television - 27" 500 - Personal Computer w/17" monitor 800 - Other - - Security System 180 - AM/FM Clock Radio 300 - Garage Door Opener - 1/2 HP 480 520 Electric Water Heater - 40 Gallon 4000 - DIY/Job Site - - Quartz Halogen Work Light 1000 - Airless Sprayer - 1/3 HP 600 1200 Reciprocating Saw 960 960 Electric Drill - 1/2 HP 1000 1000 Circular Saw - 7 1/4" 1500 1500 Miter Saw - 10" 1800 1800 Table Planer - 6" 1800 1800 Table Saw/Radial Arm Saw - 10" 2000 2000	,		-
Personal Computer w/17" monitor 800 - Other			-
Other Security System 180 - AM/FM Clock Radio 300 - Garage Door Opener - 1/2 HP 480 520 Electric Water Heater - 40 Gallon 4000 - DIY/Job Site - - Quartz Halogen Work Light 1000 - Airless Sprayer - 1/3 HP 600 1200 Reciprocating Saw 960 960 Electric Drill - 1/2 HP 1000 1000 Circular Saw - 7 1/4" 1500 1500 Miter Saw - 10" 1800 1800 Table Planer - 6" 1800 1800 Table Saw/Radial Arm Saw - 10" 2000 2000		500	-
Security System	Personal Computer w/17" monitor	800	-
AM/FM Clock Radio 300 - Garage Door Opener - 1/2 HP 480 520 Electric Water Heater - 40 Gallon 4000 - DIY/Job Site Quartz Halogen Work Light 1000 - Airless Sprayer - 1/3 HP 600 1200 Reciprocating Saw 960 960 Electric Drill - 1/2 HP 1000 1000 Circular Saw - 7 1/4" 1500 1500 Miter Saw - 10" 1800 1800 Table Planer - 6" 1800 1800 Table Saw/Radial Arm Saw - 10" 2000 2000			
Garage Door Opener - I/2 HP 480 520 Electric Water Heater - 40 Gallon 4000 - DIY/Job Site Quartz Halogen Work Light 1000 - Airless Sprayer - I/3 HP 600 1200 Reciprocating Saw 960 960 Electric Drill - I/2 HP 1000 1000 Circular Saw - 7 I/4" 1500 1500 Miter Saw - 10" 1800 1800 Table Planer - 6" 1800 1800 Table Saw/Radial Arm Saw - 10" 2000 2000		180	-
Electric Water Heater - 40 Gallon	AM/FM Clock Radio	300	-
DIY/Job Site Quartz Halogen Work Light 1000 - Airless Sprayer - 1/3 HP 600 1200 Reciprocating Saw 960 960 Electric Drill - 1/2 HP 1000 1000 Circular Saw - 7 1/4" 1500 1500 Miter Saw - 10" 1800 1800 Table Planer - 6" 1800 1800 Table Saw/Radial Arm Saw - 10" 2000 2000	Garage Door Opener - 1/2 HP	480	520
Quartz Halogen Work Light 1000 - Airless Sprayer - 1/3 HP 600 1200 Reciprocating Saw 960 960 Electric Drill - 1/2 HP 1000 1000 Circular Saw - 7 1/4" 1500 1500 Miter Saw - 10" 1800 1800 Table Planer - 6" 1800 1800 Table Saw/Radial Arm Saw - 10" 2000 2000	Electric Water Heater - 40 Gallon	4000	-
Airless Sprayer - 1/3 HP 600 1200 Reciprocating Saw 960 960 Electric Drill - 1/2 HP 1000 1000 Circular Saw - 7 1/4" 1500 1500 Miter Saw - 10" 1800 1800 Table Planer - 6" 1800 1800 Table Saw/Radial Arm Saw - 10" 2000 2000			
Reciprocating Saw 960 960 Electric Drill - 1/2 HP 1000 1000 Circular Saw - 7 1/4" 1500 1500 Miter Saw - 10" 1800 1800 Table Planer - 6" 1800 1800 Table Saw/Radial Arm Saw - 10" 2000 2000		1000	-
Electric Drill - 1/2 HP 1000 1000 Circular Saw - 7 1/4" 1500 1500 Miter Saw - 10" 1800 1800 Table Planer - 6" 1800 1800 Table Saw/Radial Arm Saw - 10" 2000 2000	Airless Sprayer - 1/3 HP	600	1200
Circular Saw - 7 1/4" 1500 1500 Miter Saw - 10" 1800 1800 Table Planer - 6" 1800 1800 Table Saw/Radial Arm Saw - 10" 2000 2000	Reciprocating Saw	960	960
Miter Saw - 10" 1800 1800 Table Planer - 6" 1800 1800 Table Saw/Radial Arm Saw - 10" 2000 2000	Electric Drill - 1/2 HP	1000	1000
Table Planer - 6" 1800 1800 Table Saw/Radial Arm Saw - 10" 2000 2000	Circular Saw - 7 1/4"	1500	1500
Table Saw/Radial Arm Saw - 10" 2000 2000	Miter Saw - 10"	1800	1800
	Table Planer - 6"	1800	1800
Air Compressor - I-I/2 HP 2500 2500	Table Saw/Radial Arm Saw - 10"	2000	2000
	Air Compressor - 1-1/2 HP	2500	2500

^{*}Wattages listed are approximate only. Check tool or appliance for actual wattage.











SPECIFICATIONS

Maximum Surge Watts 4,550 Watts
Continuous Wattage Capacity 3,250 Watts
Power Factor
Rated Maximum Continuous Load Current
At I20 Volts 27.I Amps
At I20 Volts 27.I Amps Phase I-phase
•

MAINTENANCE RECOMMENDATIONS

The Owner/Operator is responsible for making sure that all periodic maintenance tasks are completed on a timely basis; that all discrepancies are corrected; and that the unit is kept clean and properly stored. **Never operate a damaged or defective generator.**

Engine Maintenance

See engine owner's manual for instructions.



CAUTION! Avoid prolonged or repeated skin contact with used motor oil. Used motor oil has been shown to cause skin cancer in certain laboratory animals. Thoroughly wash exposed areas with soap and water.

KEEP OUT OF REACH OF CHILDREN. DON'T POLLUTE. CONSERVE RESOURCES. RETURN USED OIL TO COLLECTION CENTERS.

Generator Maintenance

Generator maintenance consists of keeping the unit clean and dry. Operate and store the unit in a clean dry environment where it will not be exposed to excessive dust, dirt, moisture or any corrosive vapors. Cooling air slots in the generator must not become clogged with snow, leaves or any other foreign material.

NOTE: DO NOT use a garden hose to clean the generator. Water can enter engine fuel system and cause problems. In addition, if water enters generator through cooling air slots, some of the water will be retained in voids and cracks of the rotor and stator winding insulation. Water and dirt buildup on the generator internal windings will eventually decrease the insulation resistance of these windings.

To Clean the Generator

- Use a damp cloth to wipe exterior surfaces clean.
- Soft, bristle brush may be used to loosen caked on dirt or oil.
- A vacuum cleaner may be used to pick up loose dirt and debris.
- Low pressure air (not to exceed 25 psi) may be used to blow away dirt. Inspect cooling air slots and opening on generator. These openings must be kept clean and unobstructed.

STORAGE

The unit should be started at least once every seven days and allowed to run at least 30 minutes. If this cannot be done and you must store the unit for more than 30 days, use the following guidelines to prepare it for storage.

Generator Storage

- Clean the generator as outlined in "To Clean the Generator" on this page.
- Check that cooling air slots and openings on generator are open and unobstructed.



CAUTION! Storage covers can be flammable. DO NOT place a storage cover over a hot generator. Let the unit cool for a sufficient time before placing the cover on the unit.

Engine Storage

See engine owner's manual for instructions.

Other Storage Tips

- To prevent gum from forming in fuel system or on essential carburetor parts, add fuel stabilizer into fuel tank and fill with fresh gasoline. Run the unit for several minutes to circulate the additive through the carburetor. The unit and fuel can then be stored for up to 24 months. Fuel stabilizer can be purchased locally.
- DO NOT store gasoline from one season to another unless it has been treated as described above.
- Replace fuel container if it starts to rust. Rust and/or dirt in fuel can cause problems if it's used with this unit.
- · Store unit in a clean and dry area.





TROUBLESHOOTING


Problem	Cause	Solution		
Engine is running, but no AC output is available.	 Circuit breaker is open. Poor connection or defective cord set. Connected device is bad. Fault in generator. 	 Reset circuit breaker. Check and repair. Connect another device that is in good condition. Contact Generac service facility. 		
Engine runs good but bogs down when loads are connected.	 Short circuit in a connected load. Generator is overloaded. Engine speed is too slow. Shorted generator circuit. 	 Disconnect shorted electrical load. See "Don't Overload the Generator" on page 8. Contact Briggs and Stratton service facility. Contact Generac service facility. 		
Engine will not start; or starts and runs rough.	 Rocker switch set to "Off". Fuel valve is in the "Off" position. Dirty air cleaner. Out of gasoline. Stale gasoline. Spark plug wire not connected to spark plug. Bad spark plug. Water in gasoline. Overchoking. Low oil level. Excessively rich fuel mixture. Intake valve stuck open or closed. Engine has lost compression. 	 Set switch to "On". Turn fuel valve to the "On" position. Clean or replace air cleaner. Fill fuel tank. Drain gas tank and fill with fresh fuel. Connect wire to spark plug. Replace spark plug. Drain gas tank; fill with fresh fuel. Set choke to Run position. Fill crankcase to proper level. Contact Briggs and Stratton service facility. Contact Briggs and Stratton service facility. Contact Briggs and Stratton service facility. 		
Engine shuts down during operation.	Out of gasoline. Fault in engine.	Fill fuel tank. Contact Briggs and Stratton service facility.		
Engine lacks power.	 Load is too high. Dirty air filter. Engine needs to be serviced. 	 See "Don't Overload the Generator" on page 8. Replace air filter. Contact Briggs and Stratton service facility. 		
Engine "hunts" or falters.	Choke is opened too soon. Carburetor is running too rich or too lean.	Move choke to halfway position till engine runs smoothly. Contact Briggs and Stratton service facility.		









SCHEMATIC AND WIRING DIAGRAM

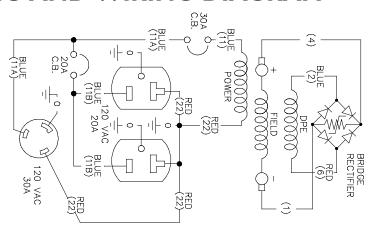


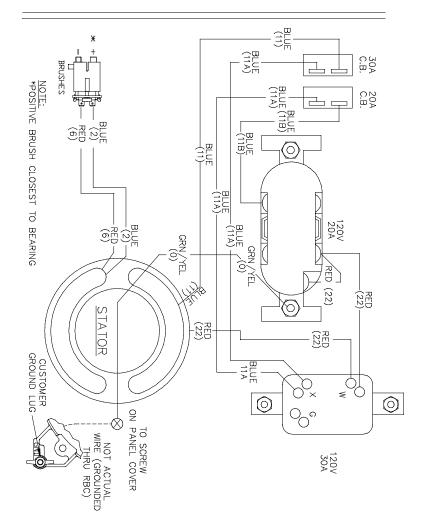



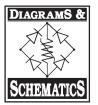

EXPLODED VIEW - MAIN UNIT

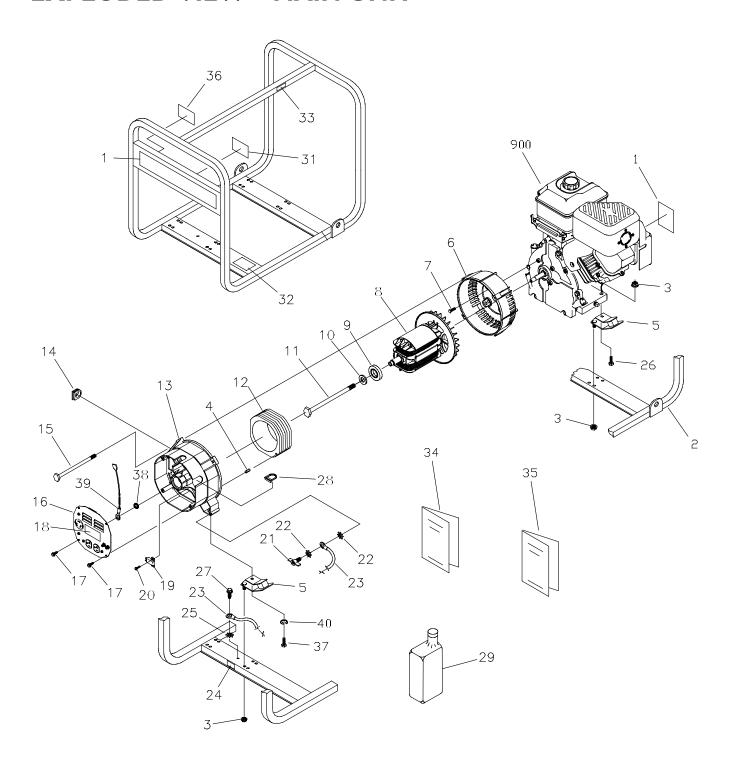








PARTS LIST - MAIN UNIT

ltem	Part #	Qty	Description
I	189996GS	1	SET, Decal, Unit & Air Cover
2	A190341GS	- 1	ASSY, Cradle
3	67989GS	10	NUT
4	81917GS	ı	PIN, Roll
5	70642GS	4	MOUNT, Vibration
	66365GS	- 1	HOUSING, Engine Adapter
7	86307GS	4	SCREW
8	B2816JGS	- 1	ASSY, Rotor (Includes Item 9)
9	65791GS	ı	BEARING, Ball
10	96796GS	- 1	WASHER
11	24823GS	ı	SCREW
	190488AGS	ı	ASSY, Stator
13	SRV66825DC	SS I	CARRIER, Rear Bearing
14		ı	GROMMET, Rubber
15	86308GS	4	SCREW
	189645GS	I	ASSY, Control Panel (see page 14)
	74908GS	4	SCREW
18	189999GS	- 1	DECAL, Control Panel
19	91825GS	I	RECTIFIER, Brush & Bridge
	66849GS	2	SCREW
	86494GS	I	SCREW, Wing
22	26850GS	2	WASHER
23	14353621GS B4986GS	I	ASSY, Wire, Ground
		I	DECAL, Ground
25	23762GS	- 1	WASHER
	84346GS		SCREW
	86292GS	I	SCREW
28	84242GS	2	GROMMET, Plastic
	BB3061GS	I	BOTTLE, Oil
	191775GS	I	DECAL, Start Instructions
32		ı	DECAL, I-800
33	77816GS	I	DECAL, Caution Hot Muffler
34	189653GS	- 1	MANUAL, Owners
	191458GS	İ	MANUAL, Engine
	93639GS	I	DECAL, Danger
	70644GS	2	SCREW
38	23762GS	I	WASHER
39	55199JGS		WIRE, Ground Panel
40	22129GS	2	
900	NSP	I	ENGINE





EXPLODED VIEW AND PARTS LIST - CONTROL PANEL

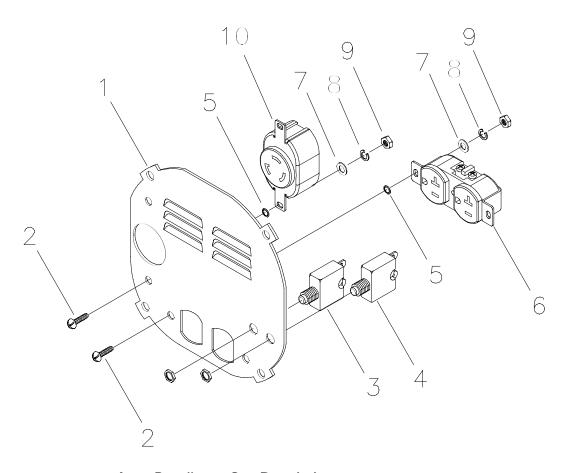


ltem	Part #	Qty	Description
- 1	95600GS	T	COVER, Control Panel
2	75475GS	4	SCREW
3	94396BGS	- 1	BREAKER, Circuit
4	94396FGS	- 1	BREAKER, Circuit
5	23365GS	4	WASHER
6	68759GS	- 1	OUTLET, 120V, 20A Duplex
7	38150GS	4	WASHER
8	22264GS	4	WASHER, Lock
9	51715GS	4	NUT
10	68868GS	- 1	OUTLET, Locking, 120V AC, 30A







EXPLODED VIEW AND PARTS LIST – WHEEL KIT

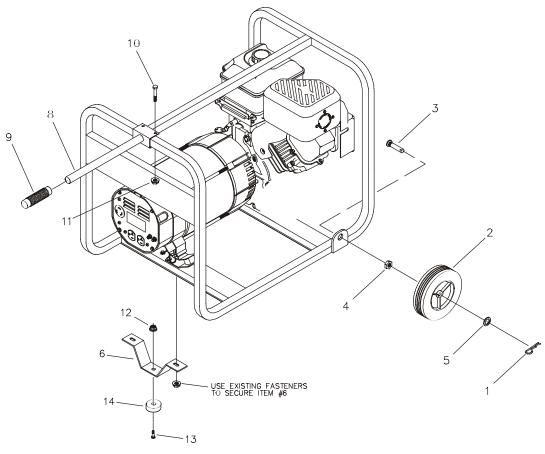

ltem	Part #	Qty	Description
- 1	87005AGS	2	PIN, Retaining
2	87280GS	2	WHEEL
3	93728GPGS	2	STUD, Axle
4	94222QGS	2	JAM NUT, Lock
5	49808GS	2	WASHER
6	190505GS		LEG, Mounting
8	B84910GS		HANDLE, Lifting (Includes Item 9)
9	75928GS		GRIP, Handle
10	39287GS	2	SCREW
11	52858GS	2	NUT, Lock
12	77395GS		NUT, Lock
13	47411GS		SCREW
14	87841GS	- 1	MOUNT, Rubber Donut





DESCRIPCIÓN DEL EQUIPO



Lea este manual de manera cuidadosa y familiarícese con su generador. Conozca sus usos, sus limitaciones y cualquier peligro relacionado con el mismo.

Este generador funciona en base a un motor, de campo eléctrico giratorio y de corriente alterna (AC). Fue diseñado con la finalidad de proveer energía eléctrica para luces eléctricas, aparatos, herramientas compatibles y cargas de motor. El campo giratorio del generador funciona a una velocidad de 3,6000 rpm usando un motor con un solo cilindro.

¡PRECAUCIÓN! NO sobrepase la capacidad de vataje y amperaje del generador. Revise "No sobrecargue el Generador" en la página 22.

Se ha hecho cada esfuerzo posible para asegurarse que la información que aparece en este manual es exacta y se encuentra actualizada. Sin embargo, Generac se reserva el derecho a cambiar, alterar o de otra manera mejorar, el producto y este documento en cualquier momento, sin previo aviso.

El Sistema de Control de Emisiones para este generador está garantizado para juegos estándares por la Agencia de Protección Ambiental. Para mayor información acerca de la garantía, consulte con el manual del propietario del motor.

INSTRUCCIONES DE SEGURIDAD

El símbolo de alerta de seguridad () es usado con una palabra (PELIGRO, ADVERTENCIA, PRECAUCIÓN), un mensaje por escrito o una ilustración, para alertarlo acerca de cualquier situación de peligro que pueda existir. PELIGRO indica un riesgo el cual, si no se evita, causará la muerte o una herida grave. ADVERTENCIA indica un riesgo el cual, si no se evita, puede causar la muerte o una herida grave. PRECAUCIÓN indica un riesgo, el cual, si no se evita, puede causar heridas menores o moderadas. PRECAUCIÓN, cuando se usa sin el símbolo de alerta, indica una situación que podría resultar en el daño del equipo. Siga los mensajes de seguridad para evitar o reducir los riesgos de heridas e inclusive la muerte.



ADVERTENCIA

El escape del motor de este producto contiene elementos químicos reconocidos en el Estado de California por producir cáncer, defectos de nacimiento u otros daños de tipo reproductivo.

En el estado de California es obligatorio, según la ley, el uso de apagachispas (Sección 4442 del Código de Recursos Públicos de California). Otros estados pueden tener leyes similares. Las leyes federales se aplican en tierras federales. Si equipa el silenciador con un apagachispas, este deberá ser mantenido en buenas condiciones de trabajo.

A PELIGRO



Al generador funcionar, se produce monóxido de carbono, un gas inodoro y venenoso.

El respirar el monóxido de carbono, producirá náusea, desmayo o la muerte.

- Opere el generador SOLAMENTE al aire libre.
- Mantenga al menos 2 pies de espacio libre alrededor del generador, para la adecuada ventilación.
- No opere el generador dentro de un edificio o lugar cerrado, incluyendo el compartimiento del generador en un vehículo recreativo o RV.

A PELIGRO



Si no hace tierra apropiadamente con un generador, puede hacer que ocurra un electrocutamiento, especialmente si el generador se equipa con un juego de la rueda.

 Los Códigos Nacionales para la Electricidad, requieren que los generadores estén haciendo tierra de una manera aprobada. Llame a un electricista para conocer los requisitos locales para hacer tierra.

PELIGRO



Los generadores producen un voltaje muy poderoso. Si no aísla el generador de utilidades de energía, puede hacer que los trabajadores de electricidad sufran heridas graves e inclusive la muerte, debido a la retroalimentación de la energía eléctrica.

- Cuando use un generador como poder de energía auxiliar, notifique a la compañía de utilidades. Use el equipo de transferencia aprobado para aislar el generador de otra utilidad eléctrica.
- Use un interruptor para la falla del circuito de tierra (GFCI) en cualquier área bastante húmeda o que sea altamente conductiva, tales como terrazas de metal o trabajo hecho con acero.
- · No toque los alambres pelados o receptáculos.
- No use un generador con cables eléctricos que estén malgastados, rotos, pelados o dañados de cualquier forma.
- · No opere el generador bajo la lluvia.
- No maneje el generador o cables eléctricos mientras esté parado en agua, descalzo o cuando las manos y los pies estén mojados.
- No permita que personas descalificadas o niños operen o sirvan al generador.

A

ADVERTENCIA



Chispear involuntario puede tener como resultado el fuego o el golpe eléctrico.

CUANDO AJUSTE O HAGA REPARACIONES A SU MÁQUINA GENERADOR

 Siempre desconecte el alambre de la bujía y colóquelo donde no pueda entrar en contacto con la bujía.







ADVERTENCIA



La gasolina y sus vapores son extremadamente inflamables y explosivos.



El fuego o una explosión pueden causar quemaduras severas e inclusive la muerte.

CUANDO AÑADA COMBUSTIBLE

- Apague el generador (posición OFF) y déjelo enfriar al menos por 2 minutos antes de remover la tapa de la gasolina. Afloje la tapa lentamente para dejar que la presión salga del tanque.
- Llene el tanque al aire libre.
- No llene demasiado el tanque. Permita al menos espacio para la expansión del combustible.
- Mantenga la gasolina alejada de chispas, llamas abiertas, pilotos, calor y otras fuentes de ignición.
- · No encienda un cigarrillo o fume.

CUANDO OPERE EL EOUIPO

 No incline el motor o el equipo, de tal manera que la gasolina se pueda derramar.


CUANDO TRANSPORTE O REPARE EL EQUIPO

- Transporte o repare el equipo con el tanque de combustible vacío, o con la válvula para apagar el combustible, apagada (posición OFF).
- · Desconecte el cable de la bujía.

CUANDO ALMACENE O GUARDE EL EQUIPO CON COMBUSTIBLE EN EL TANQUE

 Almacene alejado de calderas, estufas, calentadores de agua, secadoras de ropa u otros aparatos electrodomésticos que posean pilotos u otras fuentes de ignición, porque ellos pueden encender los vapores de la gasolina.

PELIGRO

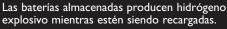



El hidrógeno puede permanecer cerca de la batería por un periodo largo de tiempo, después que la batería haya sido recargada.

Una pequeña chispa puede encender el hidrógeno y causar una explosión.

Usted puede quedar ciego o sufrir heridas muy graves.



El fluido de electrolito de la batería contiene ácido y es extremadamente cáustico.

El contacto con el fluido de la batería puede causar quemaduras químicas severas.

- No permita ninguna llama abierta, chispa, calor, o encienda un cigarrillo durante y por varios minutos después de haber recargado la batería.
- · Lleve puestos las gafas protectoras, delantal y guantes de goma.

ADVERTENCIA



Los motores al funcionar producen calor. La temperatura del silenciador y de las áreas cercanas puede alcanzar o pasar los 150°F (65°C).

Quemaduras severas pueden ocurrir al hacer contacto.

- No toque las superficies calientes.
- · Permita que el equipo se enfríe antes de tocarlo.

A PRECAUCIÓN

Las velocidades de operación en exceso, aumentan los riesgos de heridas y daños al generador.

Las velocidades bajan en exceso, imponen una carga muy pesada.

- No cambie ninguna velocidad determinada. El generador suministra una frecuencia y un voltaje calificado cuando funciona a una velocidad determinada
- · No modifique al generador en ninguna forma.

PRECAUCIÓN

El sobrepasar la capacidad del amperaje y vataje del generador, puede dañar al generador y los aparatos eléctricos conectados al mismo.

- Vea "No sobrecargue su generador" en la página 22.
- Encienda su generador y deje que el motor se estabilice antes de conectar las cargas eléctricas.
- Conecte las cargas eléctricas en la posición de apagado (OFF), luego encienda (ON) para su operación.
- Apague (OFF) las cargas eléctricas y desconéctelas del generador antes de parar el generador.

PRECAUCIÓN

El tratamiento inadecuado del generador puede dañarlo y acortar su vida productiva.

- Use el generador solamente con la finalidad para el cual fue diseñado.
- Si usted tiene alguna pregunta acerca de las finalidades de uso del generador, pregúntele a su concesionario o contacte a Generac.
- Opere el generador solamente en superficies niveladas.
- No exponga al generador a una humedad excesiva, polvo, suciedad o vapores corrosivos.
- · No inserte cualquier objeto a través de las ranuras de enfriamiento.
- Si los aparatos conectados se sobrecalientan, apáguelos y desconéctelos del generador.
- Apague el generador si:
 - -Se pierde la salida eléctrica;
 - -El equipo produce chispas, humo o emite llamas;
 - -La unidad vibra de una manera excesiva.






CONOZCA SU GENERADOR

Lea este manual del propietario y las reglas de seguridad antes de operar su generador.

Compare las ilustraciones con su Generador para familiarizarse con las ubicaciones de los diferentes controles y ajustes. Conserve este manual para referencias futuras.

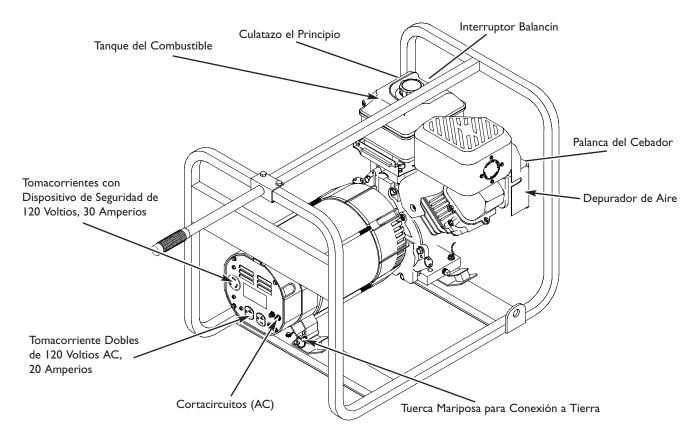

Cortacircuitos (AC) - Cada tomacorriente posee un cortacircuito para proteger el generador contra sobrecargas eléctricas. Los cortacircuitos son del tipo "oprimir para reposicionar".

Culatazo el Principio - Usó para comenzar motor.

Depurador de Aire - Filtra el aire de entrada a medida que penetra en el motor.

Interruptor Balancín - Deberá estar en la posición "On" (En) para darle arranque al motor. Colóquelo en la posición "Off" (Apagado) para detener un motor en funcionamiento.

Palanca del Cebador - Usada cuando se está dando arranque a un motor frío.


Tanque del Combustible - El tanque tiene una capacidad de I galones Americanos de gasolina sin contenido de plomo.

Tomacorriente Dobles de 120 Voltios AC, 20 Amperios -

Pueden ser utilizados para suministrar alimentación eléctrica para el funcionamiento de cargas del motor, herramientas, aparatos especiales e iluminación eléctrica de 120 Voltios AC a 20 Amperios, monofásica de 60 Hz.

Tomacorrientes con Dispositivo de Seguridad de 120 Voltios, 30 Amperios - Puede ser utilizado para suministrar alimentación eléctrica para el funcionamiento de cargas del motor, herramientas, aparatos especiales e iluminación elétrica de 120 Voltios AC a 30 Amperios, monofásica de 60 Hz.

Tuerca Mariposa para Conexión a Tierra - Usado para apropiado molió de la unidad.

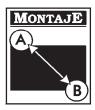






INSTALE EL JUEGO DE RUEDAS

Para instalar su Juego de Ruedas, usted necesitará las siguientes herramientas:

- Cajas de 15/16" (22mm) box, extremo abierto, o llave de tubo
- Dos cajas de 13mm box, extremo abierto, o llave de tubo

Instale el Juego de Ruedas como sigue (Figura 10):

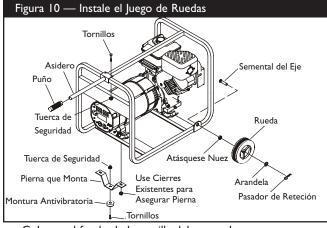

- Coloque el fondo de la camilla del generador en una superficie plana.
- Coloque semental de eje por iguala de rueda en el marco de cuna.
- Uso 15/16" la llave inglesa asegurar el semental de eje para encuadrar con nuez de mermelada 5/8-18.
- · Instale el otro semental de eje en la misma manera.

NOTA: Está seguro instalar la rueda con inboard levantado de eje.

- La unidad de la punta e instala la rueda. Coloque arandela plana sobre semental de eje.
- Retenga la rueda en el eje llena de alfiler que retiene. Instale otra rueda en el túnel restante de eje la misma manera.
- Instale los montajes antivibratorios a la pierna que monta utilizando dos tornillos prisionero y tuerca de seguridad.
- Quite dos nueces anteriores del monte de la vibración con 13 mm llave inglesa. Use estas nueces para retener la pierna que monta.
- Centre el asidero que levanta en el fin del generador de cuna.
 Conecte el asidero que usa dos 13 mm llaves inglesas con dos capscrews y dos nueces del mal de ojo.

ANTES DE DARLE ARRANQUE AL MOTOR

Agregar Aceite al Motor

CAUTION! Cualquier intento para arancar el motor antes de haberle proporcionado el mantenimiento apropiado con el aceite recomendado, podría ocasionar la falla del motor.

- Coloque la generador sobre una superficie nivelada.
- Consulte el manual del propietario del motor para añadir al motor el aceite recomendado.

NOTA: El campo giratorio del generador se encuentra en un cojinete pre-lubricado y sellado que no requiere lubricación adicional por la vida útil del cojinete.

Añadir Gasolina




¡ADVERTENCIA! NUNCA llene el tanque del combustible en recintos cerrados. NUNCA llene el tanque del combustible cuando el motor esté en funcionamiento o caliente. NO encienda cigarrillos o fume cuando esté llenando el tanque del combustible.



¡ADVERTENCIA! NO llene excesivamente el tanque de combustible. Deje suficiente espacio para la expansión del combustible.

- Use gasolina regular SIN CONTENIDO DE PLOMO en el generador. NO use gasolina premium. NO mezcle aceite con gasolina.
- Limpie el área alrededor del llenado de gasolina; retire la tapa.
- Llene lentamente el tanque con gasolina sin contenido de plomo. Sea cuidadoso de no llenar excesivamente. Deje 1.5" de espacio en el tanque para que la expansión del combustible, como se muestra en esta ilustración (Figura 11).

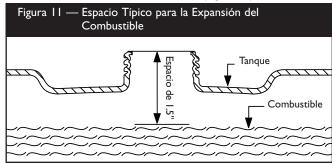

 Instale la tapa del combustible y limpie cualquier derrame de gasolina.

IMPORTANTE: Es importante evitar la formación de depósitos de goma en las partes esenciales del sistema de combustible como en el carburador, filtro del combustible, manguera del combustible o tanque, durante su almacenamiento. Los combustibles mezclados con alcohol (llamados gasohol, etanol o metanol) pueden atraer la humedad, la cual produce la separación y formación de ácidos durante el almacenamiento. La gasolina ácida puede dañar el sistema de combustible de un motor durante su almacenamiento.


Para evitar problemas en el motor, deberá vaciar el sistema de combustible antes de períodos de almacenamiento de 30 días o más. Vea "Almacenamiento" en la página 23. NUNCA use productos para limpiar motores o carburadores en el tanque del combustible; si lo hace ocurrirán daños permanentes.





CONEXION A TIERRA DEL GENERADOR

El Código Nacional de Electricidad exige que el marco y las partes exteriores del generador conductoras de electricidad, estén conectadas a tierra adecuadamente. Los códigos eléctricos locales también pueden exigir que la unidad esté conectada a tierra correctamente. Para tal propósito, se ha instalado una tuerca mariposa para conexión a tierra en la base del bastidor (Figura 12).

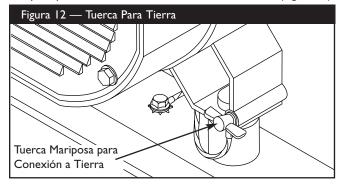

Por lo general, la conexión de un alambre de cobre trenzado No. 12 AWG (American Wire Gauge) a la aleta de conexión a tierra y a una barra de conexión a tierra de cobre o bronce (electrodo) proporciona una protección adecuada contra las descargas eléctricas. Sin embargo, los códigos locales pueden variar substancialmente. Consulte con un electricista local para conocer los requisitos de conexión a tierra de su área.

La adecuada conexión a tierra del generador ayuda a evitar descargas eléctricas si se produce alguna falla a tierra en el generador o en los dispositivos eléctricos conectados, especialmente si el generador se equipa con un juego de la rueda. También ayuda a disipar la electricidad estática que, con frecuencia, se genera en dispositivos sin conexión a tierra.

OPERANDO EL GENERADOR




¡PRECAUCIÓN! NUNCA encienda o pare el motor con las cargas eléctricas conectadas a los receptáculos Y con los aparatos conectados ENCENDIDOS.


Encienda el Motor

Desconecte todas las cargas eléctricas del generador. Use las siguientes instrucciones para encender, paso por paso, en orden numérico.


I. Gire la válvula del combustible a la posición "On" (Figura 13).

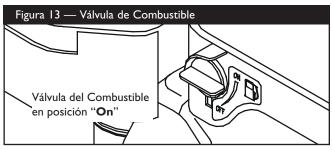

 Coloque la palanca de choke en la posición "Choke" (Figura 14).

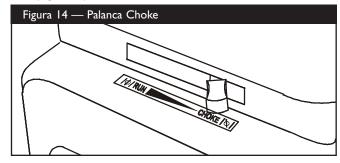

 Coloque el interruptor balancín a la posición "On" (Figura 15).

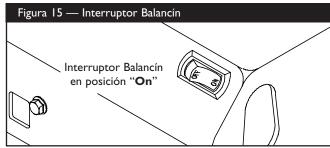

- Agarre la manilla de retroceso y hale lentamente hasta que puede sentir un poco de resistencia. Luego hale rápidamente para encender el motor.
- 5. Mueva la palanca de choke a la posición "Run" una distancia corta a la vez por algunos segundos en un clima cálido, o algunos minutos en un clima frío. Deje que el motor corra suavemente antes de cada cambio. Opere con el choke en la posición "Run".

NOTA: Si el motor aún no puede encender después de halarla tres veces, verifique el nivel adecuado de aceite en el cigüeñal. Esta unidad está equipada con un aparato para detectar el nivel bajo de aceite, que no permitirá que el motor se encienda. Vea el manual del motor.

Consulte con el manual del propietario del motor para las instrucciones completas de encendido.







Conexion de Cargas Elecricas

- Deje que el motor se estabilice y se caliente por unos minutos después del arranque.
- Enchufe y encienda las cargas eléctricas AC de 120 Voltios, monofásicas de 60 Hertzios deseadas.
- NO conecte cargas de 240 Voltios a los tomacorrientes de 120 Voltios.
- NO conecte cargas trifásicas a los tomacorrientes.
- NO conecte cargas de 50 Hertzios al generador.
- NO SOBRECARGUE EL GENERADOR. Vea "No Sobrecargue el Generador" en la página 22.


Detener el Motor

- Desconecte todas las cargas eléctricas de la unidad. NUNCA arranque o detenga el motor con dispositivos eléctricos conectados a él y ENCENDIDOS.
- Permita que el motor funcione sin carga durante dos minutos para estabilizar las temperaturas internas de la unidad.
- Mueva el interruptor del motor a la posición "Off" (Apagado).
- · Gire la válvula a la posición "Off" (Apagado).

RECEPTÁCULOS

120 Volt AC, 20 Amperios, Receptáculos Dobles


Cada receptáculo (Figura 16) está protegido en contra de sobrecargas por un corto-circuitos de 20 Amperios, del tipo "empuje para reposicionar".

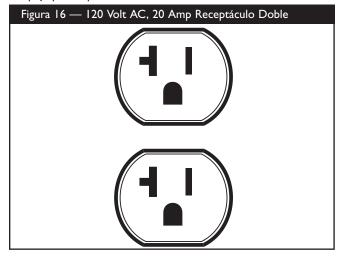

Use cada receptáculo para operar 120 Voltios AC, de fase sencilla, de cargas de 60Hz que requieren hasta 2,400 vatios (2.4 kW) a corrientes de 20 Amperios. Use los juegos de cables que son calificados para cargas de 125 Voltios AC, a 20 Amperios (o mayores).

Tomacorrientes de 120 Voltios AC, 30 Amperios

Use un enchufe tipo NEMA L5-30 con este tomacorriente. Conecte un juego de cordones de 3 alambres con una capacidad de 125 Voltios AC a 30 Amperios al enchufe (Figura 17).

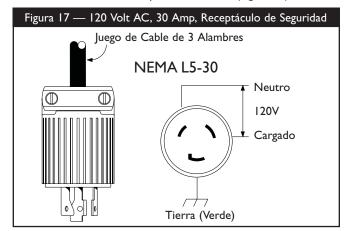

Utilice este tomacorriente para operar cargas eléctricas de 120 Voltios AC, monofásicas de 60 Hz que requieran hasta 3,600 vatios (3.6 kW) a 30 Amperios de corriente. La toma está protegida por un cortacircuito de con dispositivo de reposición.

¡PRECAUCIÓN! Aunque esta salida tiene una clasificación de 120 Voltios 30 Amperios (hasta 3,600 vatios), el generador está clasificado solamente para 3,250 vatios en 27 Amperios. Cargas que pasen la capacidad de amperaje y vataje del generador pueden dañarlo o causar accidentes muy serios.







NO SOBRECARGUE EL GENERADOR

Capacidad

Usted debe asegurarse que su generador puede proveer el suficiente vataje calificado (cuando esté funcionando) y de carga (al encender) para los aparatos a los cuales va a proveer la energía, al mismo tiempo. Siga estos pasos:

- Seleccione los aparatos que recibirán la energía, al mismo tiempo.
- Totalice los vatios calificados (cuando esté funcionando) de estos aparatos. Esta es la cantidad de energía que su generador debe producir para mantener eso aparatos funcionando adecuadamente. Vea la Figura 18.
- 3. Calcule la cantidad de vatios de carga (al encender) que usted necesitará. El vataje de carga es la cantidad mínima de electricidad, necesaria para encender herramientas o aparatos con motores eléctricos, tales como, sierras circulares o refrigeradores. Debido a que no todos los motores se encienden al mismo momento, el vataje total de carga se puede estimar al añadir solamente el(los) aparato(s) con el vataje adicional más alto, al total del vataje calificado, obtenido en el paso 2.

Ejemplo:

_,					
Herramienta o Aparato Eléctrico	Vatios Calificados (cuando esté funcionando)	Vatios Adicionales de Carga (al encender)			
Aire Acondicionado	1200	1800			
de Ventana					
Refrigerador	800	1600			
Congelador industrial	500	500			
Televisión	500	-			
Luz (75 Vatios)	75	-			
	Total = 3075	1800 (Vatios de			
	Vatios para funcionar	Carga más alto)			

Vataje Total Calificado (cuando esté funcionando) = 3075 Vataje de Carga Adicional más alto = 1800 Salida Total Requerida del Generador = 4875

Control de la Energía

Para prolongar la vida de su generador y los aparatos que estén conectados al mismo, es muy importante cuidarlo cuando se le añaden cargas eléctricas. Nada debería estar conectado a los tomacorrientes del generador antes de que su motor sea encendido. La forma correcta y más segura para controlar la energía del generador, es la de añadir en secuencias las cargas, como se describe a continuación:

- Sin tener nada conectado al generador, encienda el motor de la manera descrita en este manual.
- Conecte y encienda la primera carga, preferiblemente la mayor que usted tenga.
- Permita que la salida del generador se estabilice (el motor funciona suavemente y el aparato conectado al mismo trabaja adecuadamente).

- 4. Conecte y encienda la próxima carga.
- 5. De nuevo, permita que el generador se estabilice.
- Repita los pasos 4 y 5 para cada carga adicional que usted tenga.

NUNCA añada más cargas sobre la capacidad del generador. Tome una atención especial en considerar las cargas de corriente según la capacidad del generador, como se describe arriba.

Figura 18 - Guia de Referencia de \	/atiaje	
	Vatios	Vatios
Llauranianta a Alaurta Eléatrica	Calificados*	Adicionales
Herramienta o Aparato Eléctrico	(cuando esté	de Carga (al
	funcionando)	encender)
Esenciales		
Bombilla - 75 vatios	75	-
Congelador industrial	500	500
Bomba de aguas negras	800	1200
Refrigerador / congelador - 18 pies	800	1600
cúbicos		
Bomba de agua - 1/3 HP	1000	2000
Calefacción / enfriamiento		
Aire Acond. de ventana – 10.000 BTU	1200	1800
Ventilador de ventana	300	600
Calefactor de caldera - I/2 HP	800	1300
Cocina		
Horno de microondas – 1.000 Vatios	1000	-
Cafetera	1500	-
Cocina eléctrica – Elemento simple	1500	-
Calientaplatos	2500	-
Habitación Familiar		
Tocador de DVD/CD	100	-
VCR	100	-
Receptor estéreo	450	-
Televisor a color – 27 pulg.	500	-
Computadora personal con monitor de	800	-
17 pulg.		
Otros		
Sistema de seguridad	180	-
Radio-Reloj AM/FM	300	-
Abridor de garaje - 1/2 HP	480	520
Calentador eléctrico de agua - 40	4000	-
galones		
Taller		
Luz de halógeno para trabajar	1000	-
Rociador sin aire - 1/3 HP	600	1200
Sierra intercambiable	960	960
Taladro eléctrico - 1/2 HP	1000	1000
Sierra circular - 7 ¼ pulg.	1500	1500
Sierra inglete- 10 pulg.	1800	1800
Mesa de planificación – 6 pulg.	1800	1800
Sierra de mesa / sierra de brazo radial	2000	2000
– 10 pulg.		
Compresor de aire - I-I/2 HP HP =	2500	2500
Caballo de fuerza.		

^{*}El vataje que aparece en la lista es solamente una cantidad aproximada. Verifique la herramienta o aparato eléctrico para obtener el vataje verdadero.









ESPECIFICACIONES

Potencia Máxima 4,550 Vatios (4.55 kW)
Potencia de Sobretensión3,250 Vatios (3.25 kW)
Accione el Factor
Corriente Máxima a 120 Voltios 27.1 Amperios
Fase
Frecuencia Nominal
Peso que Embarca

RECOMENDACIONES GENERALES DE MANTENIMIENTO

El propietario/operador es responsable por asegurarse de que todos los trabajos periódicos de mantenimiento se lleven a cabo adecuadamente; que todos los problemas son resueltos; y que la unidad se mantiene limpia y adecuadamente almacenada. **Nunca opere un generador que esté dañado o defectuoso.**

Mantenimiento del Motor

Consulte el manual del propietario del motor para las instrucciones de cómo mantener adecuadamente el motor.



¡PRECAUCIÓN! Evite el contacto prolongado o repetido de piel con aceite usado de motor. El aceite usado del motor ha sido mostrado al cancer de la piel de la causa en ciertos animales del laboratorio. Completamente lavado expuso áreas con el jabón y el agua.

MANTENGA FUERA DE ALCANCE DE NIÑOS. NO CONTAMINE. CONSERVE los RECURSOS. VUELVA ACEITE USADO A la COLECCION CENTRA.

Mantenimiento del Generador

El mantenimiento del generador consiste en conservar la unidad limpia y seca. Opere y almacene la unidad en un ambiente limpio y seco donde no será expuesta al polvo, suciedad, humedad o vapores corrosivos. Las ranuras del aire de enfriamiento del generador no deben estar tapadas con nieve, hojas, o cualquier otro material extraños.

NOTA: NO recomendamos el uso de mangueras de jardín para limpiar el generador. El agua podría introducirse en el sistema de combustible del motor y causar problemas. Además, si el agua se introduce al generador a través de las ranuras para aire de enfriamiento, algo del agua quedará retenida en los espacios vacíos y grietas del aislamiento del devanado del estator y rotor. La acumulación de agua y suciedad en los devanados internos del generador disminuirá eventualmente la resistencia del aislamiento de estos devanados.

Para Limpiar el Generador

- Utilice un trapo húmedo para limpiar las superficies exteriores.
- Puede usar un cepillo de cerdas suaves para retirar la suciedad endurecida, aceite, etc.
- Puede usar una máquina aspiradora para eliminar suciedad y residuos sueltos.
- Puede usar aire a baja presión (que no exceda los 25 psi) para eliminar la suciedad. Inspeccione las ranuras para aire de enfriamiento y la apertura del generador. Estas aperturas deberán mantenerse limpias y despejadas.

ALMACENAMIENTO

El generador deberá ser encendido al menos una vez cada siete días y deberá dejarlo funcionar al menos durante 30 minutos. Si no puede hacer esto y debe almacenar la unidad por más de 30 días, siga las siguientes instrucciones para preparar su unidad para almacenamiento.

Almacenando el Generador

- Limpie el generador como está descrito en ("Para Limpiar el Generador").
- Revise que las ranuras para el aire de enfriamiento y las aperturas del generador se encuentren abiertas y despejadas.



¡PRECAUCIÓN! Las cubiertas para almacenamiento pueden ser inflamables. NO coloque una cubierta encima de un generador caliente. Deje que la unidad se enfríe lo suficientemente antes de que le coloque la cubierta.

Almacenando el Motor

Consulte el manual del propietario del motor para las instrucciones de cómo preparar adecuadamente el motor para su almacenamiento.

Otras Sugerencias Para el Almacenando

- Para prevenir que se forme una resina en el sistema de combustible o en partes esenciales del carburador, vacíe estabilizadores del combustible, suministrados, en el tanque de gasolina y llene con gasolina fresca. Haga funcionar la unidad por algunos minutos para hacer circular el aditivo a través del carburador. La unidad y el combustible pueden ser almacenados hasta por 24 meses. Se puede comprar más estabilizador del combustible, en su tienda local.
- NO almacene gasolina de una estación a otra estación, al menos que haya sido tratada como se mencionó antes.
- Reemplace la caneca de gasolina si comienza a oxidarse. El óxido y/o la suciedad en la gasolina le causará problemas.
- Almacene la unidad en un área limpia y seca.



No ₁	ΓAS

NOTAS	







DIAGNÓSTICO Y REPARACIÓN DE AVERÍAS

Problema	Causa	Solución
	Uno de los cotacircuitos está abierto.	Reajuste el cortacircuito.
El motor está funcionando pero no existe salida de AC disponible.	2. Falla en el generador.	2. Póngase en contacto con la Planta de
		Servicio de Generac.
	3. Mala conexión o juego de cordones	3. Revise y repare.
	defectuoso.	
	4. El dispositivo conectado está en mal estado.	4. Conecte otro dispositivo que esté en
		buenas condiciones.
El motor funciona bien sin	 Corto circuito en la carga conectada. 	 Desconecte la carga eléctrica en corto.
	2. La velocidad del motor es muy lenta.	2. Póngase en contacto con la Planta de
cargas pero "funciona mal"		Servicio de Briggs and Stratton.
cuando las cargas son	3. El generador está sobrecargado.	3. Vea "No Sobrecargue el Generador",
conectadas.		página 22.
concetadas.	4. Circuito del generador en corto.	4. Póngase en contacto con la Planta de
		Servicio de Generac.
	 Interruptor de balancín en "Off". 	 Coloque el interruptor en "On"
		(MARCHA).
	2. Válvula del Combustible en posición "Off".	2. Gire la válvula del combustible a la
		posición " On ".
	3. Depurador de aire sucio.	3. Limpie o reemplace el depurador de aire
	4. Sin gasolina.	4. Llene el tanque de combustible.
	5. Gasolina vieja.	5. Drene el tanque de gasolina; llénelo con
		combustible fresco.
El motor no arranca; o	6. El alambre de la bujía no está conectado.	6. Conecte el alambre a la bujía.
arranca y funciona mal.	7. Bujía en mal estado.	7. Reemplace la bujía.
	8. Agua en la gasolina.	8. Drene el tanque de gasolina; llénelo con combustible fresco.
	9. Exceso de cebado.	9. Espere 5 minutos y haga girar el motor.
	Mezcla de combustible excesivamente rica.	 Póngase en contacto con la Planta de
		Servicio de Briggs and Stratton.
	 Válvula de toma atascada en la posición 	11. Póngase en contacto con la Planta de
	abierta o cerrada.	Servicio de Briggs and Stratton.
	El motor ha perdido compresión.	12. Póngase en contacto con la Planta de
		Servicio de Briggs and Stratton.
El motor se apaga en pleno	Sin gasolina.	Llene el tanque del combustible.
funcionamiento.		
Al motor le hace falta	La carga es muy alta.	I. Vea "No Sobrecargue el Generador",
potencia.		página 22.
•	2. Filtro de aire sucio.	2. Reemplace el filtro de aire.
El motor "no funciona	Carburador con mezcla de aire-combustible muy	Póngase en contacto con la Planta de Servicio
continuamente" o se	rica o muy pobre.	de Briggs and Stratton.
detiene.		



Not	AS

NOTAS			

GARANTÍA LIMITADA

PÓLIZA DE GARANTÍA PARA LOS PROPIETARIOS DE PRODUCTOS PORTÁTILES GENERAC Efectiva desde el 1ro de Octubre, 2001

GARANTÍA LIMITADA

"Los productos portátiles Generac, LLC reparará o reemplazará, sin costo alguno, cualquier parte o partes del equipo que estén defectuosas en materiales o mano de obra, o ambos. Los cargos por concepto de transporte en las partes sometidas a reparación o reemplazo bajo esta garantía deben ser cubiertos por el comprador. Esta garantía es efectiva por un cierto periodo de tiempo y está sujeta a las condiciones provistas en la póliza. Para el servicio de garantía, consiga el concesionario autorizado más cercano en nuestro mapa localizador de concesionarios en www.generac-portables.com o llame al 1-877-544-0982. NO EXISTE OTRA GARANTÍA EXPRESA. LAS GARANTÍAS IMPLÍCITAS, INCLUYENDO AQUELLAS DE MERCANTIBILIDAD O CAPACIDAD PARA UN PROPÓSITO PARTICULAR, ESTÁN LIMITADAS AL PERIODO DE TIEMPO ESPECIFICADO, O HASTA EL LÍMITE PERMITIDO POR LA LEY, TODA Y CUALQUIER GARANTÍA IMPLÍCITA ESTÁ EXCLUIDA. RESPONSABILIDAD POR DAÑOS CONSECUENTES BAJO CUALQUIER Y TODAS LAS GARANTÍAS, ESTÁN EXCLUIDAS HASTA EL LÍMITE DE EXCLUSIÓN PERMITIDO POR LA LEY. Algunos estados no permiten limitaciones en cuánto y cuán implicadas, las garantías pueden ser y algunos estados no permiten la exclusión o limitación de daños incidentales o consecuentes, por lo que las limitaciones y exclusiones arriba mencionadas, es posible, que no se apliquen a usted. Esta garantía le proporciona derechos legales específicos y es posible que usted tenga otros derechos los cuales pueden variar de estado a estado y de país a país."

PERIODO DE GARANTÍA*

PRODUCTOS**	PARA USO DEL CONSUMIDOR	PARA USO COMERCIAL
Generador portátil	I año	90 días
(Válvula lateral con motor)		
Generador portátil	2 años	I año
(Motor de válvula superior)	(el segundo año solamente para las partes)	
Lavador eléctrico a presión	I año	ninguno
Lavador de gasolina a presión	I año	90 días

^{*} El periodo de garantía comienza en la fecha de compra hecha por el primer consumidor al detal o usuario comercial, y continúa por el periodo de tiempo que aparece en la tabla arriba mencionada. "Para uso del consumidor" significa, uso residencial por un consumidor al detal. "Para uso comercial" significa, todos los otros casos, incluyendo el uso comercial, para generar un ingreso o por propósitos de alquiler. Una vez que el equipo ha sido usado comercialmente, debería ser considerado como de uso comercial para las finalidades de esta garantía. El equipo usado, el equipo de demostración y el equipo usado como energía primaria en lugares donde las utilidades públicas no están garantizados. Los accesorios tales como pistolas, mangueras, varillas y boquillas están excluidos de la garantía del producto.

EL REGISTRO DE LA GARANTÍA NO ES NECESARIO PARA OBTENER LA GARANTÍA EN LOS EQUIPOS PORTÁTILES DE GENERAC. GUARDE SU RECIBO DE COMPRA. SI USTED NO PROVEE LA PRUEBA DE LA FECHA DE LA COMPRA INICIAL, AL MOMENTO EN QUE SE REQUIERA USAR LA GARANTÍA, LA FECHA DE LA FABRICACIÓN DEL EQUIPO SERÁ USADA PARA DETERMINAR EL PERIODO DE GARANTÍA.

Acerca de la seguridad de su equipo:

Los Productos Portátiles Generac, reciben las reparaciones bajo la garantía y le pide disculpas por cualquier inconveniencia causada. Cualquier Concesionario de Servicio Autorizado puede llevar a cabo reparaciones bajo la garantía. La mayoría de las reparaciones bajo la garantía son manejadas normalmente, pero algunas veces la solicitud del servicio de garantía es posible que no sea apropiada. Por ejemplo, la garantía no será válida si el daño al equipo ocurrió debido al mal uso, falta de mantenimiento adecuado, manejo, envío, almacenamiento o una instalación inadecuada. Similarmente, la garantía es anulada si el número de serial del equipo ha sido alterado o modificado.

Si un cliente no está de acuerdo con la decisión hecha por el Concesionario de Servicio, se llevará a cabo una investigación para determinar si la garantía se puede aplicar. Pida al Concesionario de Servicio que entregue todos los hechos que soportan su decisión a su Distribuidor, para que éste los revise. Si el Distribuidor decide que el reclamo es justificado, al cliente se le reembolsará completamente por todos esos artículos que están defectuosos. Para evitar un malentendido que pueda ocurrir entre el Concesionario y el cliente, abajo aparecen algunos de las razones por las cuales el equipo puede fallar, y que la garantía no cubre:

Desgaste normal:

Equipo eléctrico al aire libre, como todos los aparatos mecánicos, necesita partes, servicio y reemplazo, periódicamente, para que funcione bien. Esta garantía no cubre la reparación cuando el uso normal ha acabado con la vida de una parte en particular o del equipo.

Instalación y mantenimiento:

Esta garantía no se aplica al equipo o parte que ha estado sujeta a una instalación inadecuada, que no haya sido autorizada o a cualquier tipo de alteración, el mal uso, negligencia, accidentes, sobrecarga, velocidad excesiva, mantenimiento inadecuado, reparación o almacenamiento, que según la opinión de los Productos Portátiles Generac, han afectado desfavorablemente su rendimiento y fiabilidad. Esta garantía también no cubre el mantenimiento normal tales como ajustes, limpieza del sistema de combustión y la obstrucción (debido a materias químicas, suciedad, carbón o cal, etc.)

Otras exclusiones:

También se encuentran excluidos de está garantía, el desgaste de los artículos tales como, conectadores, medidores de aceite, correas, anillos O, filtros, empaque de la bomba, etc. las bombas que se hagan funcionar o trabajar sin agua, o daños y malfuncionamientos que resulten de accidentes, abusos, modificaciones, alteraciones, un servicio inadecuado, congelamiento o deterioro químico.

La garantía se encuentra disponible solamente a través de los concesionarios de servicios autorizados por los Productos Portátiles Generac. Esta garantía no se aplica al servicio proveniente de cualquier otra entidad.

Usted puede ubicar su Concesionario de Servicio Autorizado de los Productos Portátiles de Generac más cercano, en nuestro mapa localizador de concesionarios en www.generac-portables.com o llame al 1-877-544-0982.

Los Productos Portátiles de Generac están fabricados bajo una o más de las siguientes patentes: (Otras patentes están pendientes)
5902094 5823752 5718255 5890413

Generac Portable Products, LLC Jefferson, Wisconsin U.S.A.

^{**} El motor a gasolina y las baterías para el encendido, están garantizados por el fabricante de esos productos.

LIMITED WARRANTY

GENERAC PORTABLE PRODUCTS OWNER WARRANTY POLICY Effective October 1, 2001

LIMITED WARRANTY

"Generac Portable Products, LLC will repair or replace, free of charge, any part, or parts of the equipment that are defective in material or workmanship or both. Transportation charges on parts submitted for repair or replacement under this Warranty must be borne by purchaser. This warranty is effective for the time periods and subject to the conditions provided for in this policy. For warranty service, find the nearest Authorized Service Dealer in our dealer locator map at www.generac-portables.com or call I-877-544-0982. THERE IS NO OTHER EXPRESS WARRANTY. IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE TIME PERIOD SPECIFIED, OR TO THE EXTENT PERMITTED BY LAW ANY AND ALL IMPLIED WARRANTIES ARE EXCLUDED. LIABILITY FOR CONSEQUENTIAL DAMAGES UNDER ANY AND ALL WARRANTIES ARE EXCLUDED TO THE EXTENT EXCLUSION IS PERMITTED BY LAW. Some states do not allow limitations on how long an implied warranty lasts, and some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation and exclusion may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state and country to country."

WARRANTY PERIOD*

PRODUCTS**	CONSUMER USE	COMMERCIAL USE
Portable Generator	l year	90 days
(Side Valve Engine Powered)		
Portable Generator	2 years	l year
(Overhead Valve Engine Powered)	(2nd year parts only)	
Electric Powered Pressure Washer	l year	None
Gasoline Powered Pressure Washer	l year	90 days

^{*} The warranty period begins on the date of purchase by the first retail consumer or commercial end user, and continues for the period of time stated in the table above. "Consumer use" means personal residential household use by a retail consumer. "Commercial use" means all other uses, including use for commercial, income producing or rental purposes. Once equipment has been used commercially, it shall thereafter be considered to be in commercial use for purposes of this warranty. Used equipment, demonstration equipment and equipment used for prime power in place of a utility are not warranted. Accessory parts such as guns, hoses, wands and nozzles are excluded from the product warranty. ** The gasoline engine and starting batteries are warranted solely by the manufacturers of those products.

WARRANTY REGISTRATION IS NOT NECESSARY TO OBTAIN WARRANTY ON GENERAC PORTABLE PRODUCTS EQUIPMENT. SAVE YOUR PROOF OF PURCHASE RECEIPT. IF YOU DO NOT PROVIDE PROOF OF THE INITIAL PURCHASE DATE AT THE TIME WARRANTY SERVICE IS REQUESTED, THE MANUFACTURING DATE OF THE EQUIPMENT WILL BE USED TO DETERMINE THE WARRANTY PERIOD.

About your equipment warranty:

Generac Portable Products welcomes warranty repair and apologizes to you for being inconvenienced. Any Authorized Service Dealer may perform warranty repairs. Most warranty repairs are handled routinely, but sometimes requests for warranty service may not be appropriate. For example, warranty would not apply if equipment damage occurred because of misuse, lack of routine maintenance, shipping, handling, warehousing or improper installation. Similarly, warranty is void if the serial number of the equipment has been removed or the equipment has been altered or modified.

If a customer differs with the decision of the Service Dealer, an investigation will be made to determine whether the warranty applies. Ask the Service Dealer to submit all supporting facts to its Distributor for review. If the Distributor decides that the claim is justified, the customer will be fully reimbursed for those items that are defective. To avoid misunderstandings that might occur between the customer and the Dealer, listed below are some of the causes of equipment failure that the warranty does not cover:

Normal wears

Outdoor Power Equipment, like all mechanical devices, needs periodic parts, service and replacement to perform well. This warranty does not cover repair when normal use has exhausted the life of a part or the equipment.

Installation and Maintenance:

This warranty does not apply to equipment or parts that have been subjected to improper or unauthorized installation or alteration, misuse, negligence, accident, overloading, overspeeding, improper maintenance, repair or storage so as, in Generac Portable Products' judgment, to adversely affect its performance and reliability. This warranty also does not cover normal maintenance such as adjustments, fuel system cleaning and obstruction (due to chemical, dirt, carbon or lime, etc.).

Other Exclusions:

Also excluded from this warranty are wear items such as quick couplers, oil gauges, belts, o-rings, filters, pump packing, etc., pumps which have been run without water supplied or damage or malfunctions resulting from accidents, abuse, modifications, alterations, or improper servicing or freezing or chemical deterioration.

Warranty is available only through service dealers authorized by Generac Portable Products. This warranty does not apply to service by any other entity.

You may locate your nearest Authorized Generac Portable Product Service Dealer in our dealer locator map at www.generac-portables.com or call I-877-544-0982.

Generac Portable Products Are Made Under One Or More Of The Following Patents: (Other Patents Pending)
5902094 5823752 5718255 5890413